

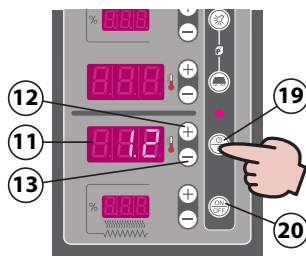
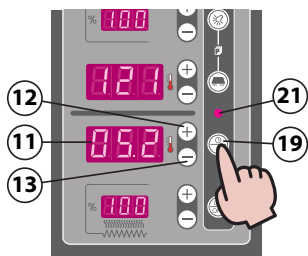
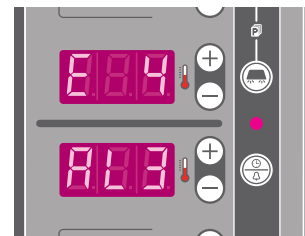


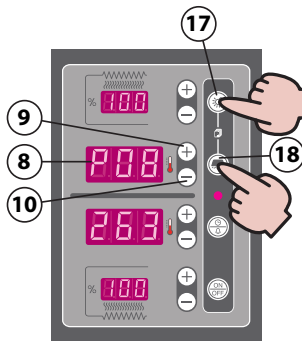

# Giotto Quick reference

## Control panel

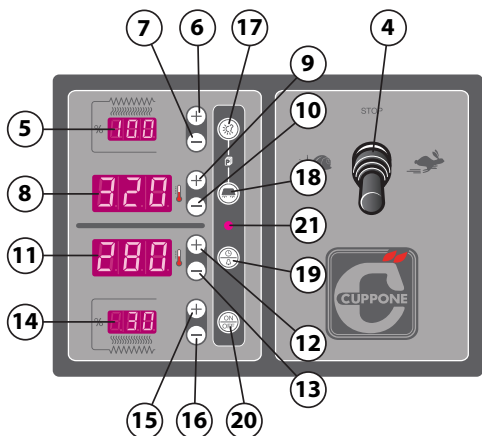

## Selection mode

By pressing the **light keys (17)** and **hood light (18) key** at the same time, you will enter the **programme selection mode**; **display (8)** presents the letter "P" followed by a number in the range of **00 to 99**.

Using **keys (9) and (10)**, it is possible to select the **programme number**; confirm with **hood light key (18)**.

To change the program, press **keys "+" (9) and "-" (10)**. These changes are **"temporary"**.

To **"permanently"** set the parameters of the programmes, press **light keys (17)** and **hood light key (18)** at the same time, with the oven turned off.

Select the number of the programme **to be changed**; confirm with the **hood light key (18)**.

To change the parameters of programme, press **keys "+" (9) and "-" (10)**.

Save the changes made using the **hood light key (18)**.

## Trouble shooting

Fault or malfunction:  
The following error messages will appear on the board **display**:

**E\_1**:  
thermocouple upper heating elements fault.

**E\_2**:  
power board heatsink probe fault or high temperature warning.

**E\_3**:  
control board cold junction probe fault or high temperature warning.

**E\_4**:  
thermocouple lower heating elements fault.

**AL1**:  
pre warning of high power board temperature.

**AL2**:  
warning of high control board temperature.

**NOTE**:  
**E**: oven turns off.  
**AL**: oven continues cooking.

## End of cooking time buzzer

Press **key (19)** when the oven is on. The time before intervention of the "buzzer" will appear on **display (11)** and the countdown will activate.

If you wish to modify the time, use **keys "+" (12) and "-" (13)**.

## Countdown automatically turns

Press **key (19)** with the oven turned off. The time remaining before the oven is due to turn itself on will appear on **display (11)**;

to modify the time, use **keys "+" (12) and "-" (13)**.

Should you wish to exit the function and cancel the countdown, press **key (19)** once again or **key (20) to turn on the oven**.

## ATTENTION:

**A** - Never switch the oven off using the ON/OFF button (20) whilst the refractory surface is rotating. Always bring the joystick (4) back to its central position.

**B** - The light automatically goes out when the oven is switched off!

**C** - During pyrolysis, turn off the light in order to preserve bulbs. The programme P99 (which cannot be modified by the user) is already set to carry out pyrolysis and automatically switches off the light! Key (17) can be used to control the light.

**D** - Regularly remove the refractory bricks from the cooking surface and clean the burn residues from the base.

**E** - Disconnect the electrical power supply before carrying out any operations to the electrical controls and before replacing the light bulbs.

**F** - Never work without using protective glass of the lamp; if it should break, replace it immediately.

**G** - RISK OF FIRE!  
Every 3 months, open the control unit and carefully vacuum any flour or dust deposits!